

# DiscGolfPark® Target

 


## DisCatcher Installation - Parts and Tools Needed


- Target parts (4): chain rack, basket, pole and sleeve (included in regular delivery)
- Bolts and nuts for attaching target parts (included in regular delivery)
- Concrete base (or mold) and a plastic tightening socket (not included in regular delivery)
- Optionally a rock base or a portable foot
- 8 mm hex key (included in regular delivery)
- Digging tools
- Gravel

## Accessories

- portable foot
- concrete base
- rock base
- flag

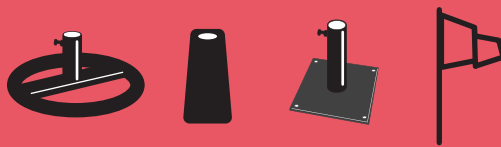

 Detailed installation  
instructions on the back side.

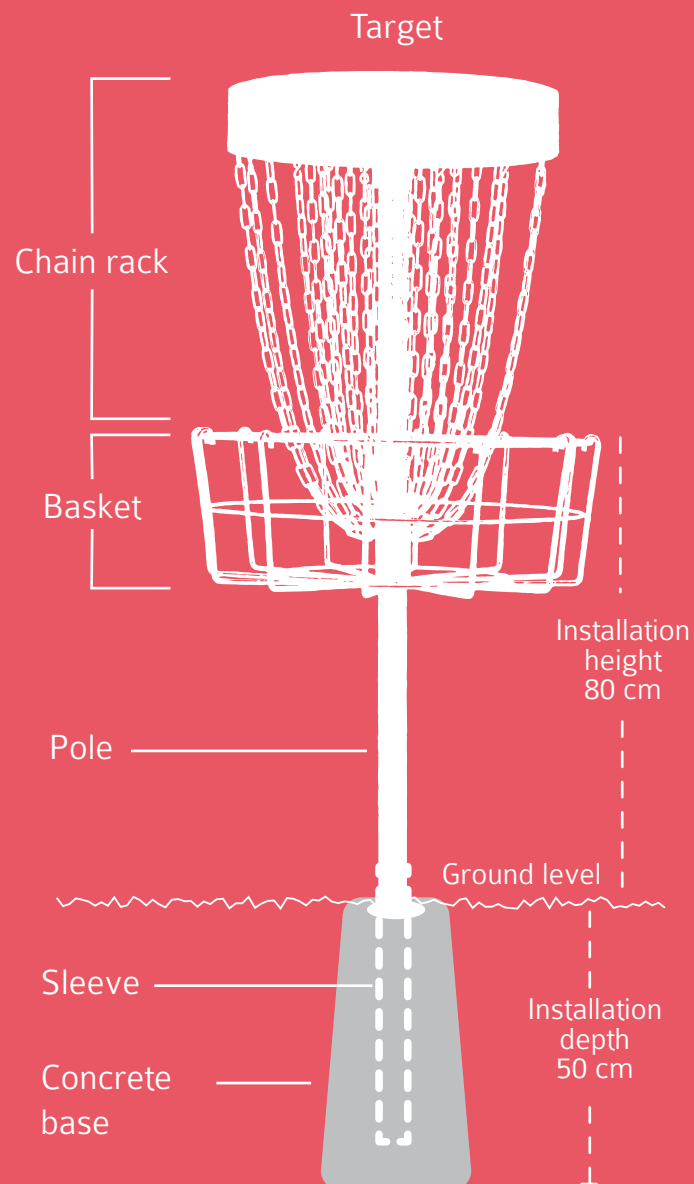

# DiscGolfPark® Target



## Installation Phases

1. Dig a hole that is 50 cm deep and 50 cm wide. Put the concrete base in the hole.
2. If you use a ready-made concrete base, put the sleeve in it. If you cast the concrete yourself, put the sleeve in concrete so that concrete doesn't get inside the sleeve.
3. Put the pole in the sleeve and set it straight. Notice that the closed pole must be placed down. Attach the pole in concrete by pressing down the plastic socket around the pole. Fill the hole with coarse gravel and pack it tight.
4. Assemble the basket. Attach the basket part on the pole first with a bolt and nut. Then attach the chain rack with a bolt and nut. Remember to attach the plastic end on the top of the pole. Finally, tighten the bolts with the hex key.
5. The installation height of the basket is 80 cm from the ground (measured from the upside of the basket part as depicted on the other side of this page).



## DisCatcher Installation on Rock

- Rock base (to be ordered separately)

1. Find a flat and solid place for the rock base so that it can be attached from its every corner.
2. Level the rock base using nuts for instance.
3. You will need 10 mm bolts that are 80-100 mm in length.
4. Tighten the bolts with a wrench.

