

## Target Installation -Parts and Tools Needed







## Installation Phases

- Dig a hole that is 50 cm deep and at least 2 by 2 meters wide. (4 x 4 meters required if you install the optional GreenPad)
- 2. Put a fibre cloth in the bottom to prevent vegetation from growing through
- Start filling the frame with about 14 cm of packed gravel to begin with (the MultiGolfPark Cup installation depth is 36 cm). This way the cup will be slightly below ground level at the end. Use either machinery or body weight for packing.
- Place the MultiGolfPark Cup in the middle of the hole so that its top will be at ground level. Make sure it's level. The DiscGolfPark Target base should be attached before filing the hole with the rest of the gravel.
- 5. Fill the hole with gravel around the MultiGolfPark Cup up to ground level and pack tightly.
- (6.) Optional GreenPad: Place the two turf mats on top of the 4 x 4 meter area side by side, leaving the MultiGolfPark Target pole in the middle.

(7.) Optional GreenPad: Cut an opening for the MultiGolfPark Cup.

(8.) If you have ordered the optional MultiGolfPark Cup Frame, put it on top of the MultiGolfPark Cup. Press it firmly against ground level.

