


Target Installation -Parts and Tools Needed

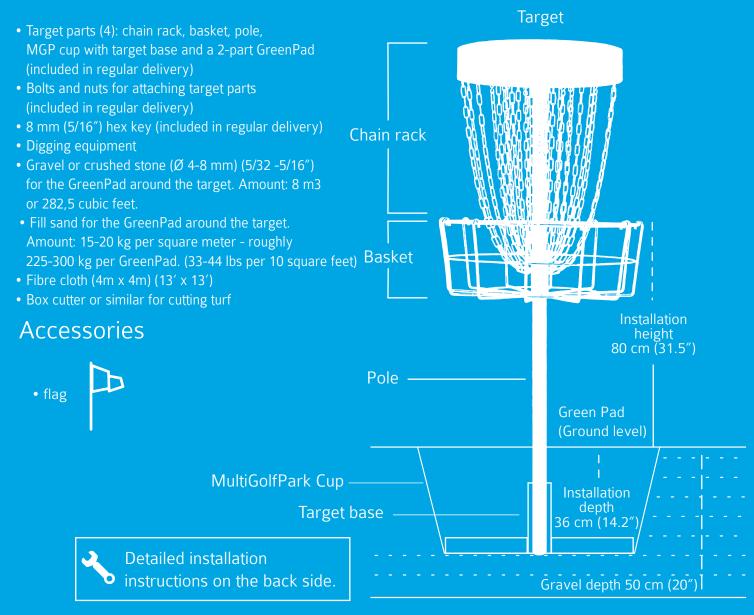





Installation Phases

- Dig a hole that is 50 cm deep and 4 by 4 meters wide. (Imperial units: 20" deep, 13' by 13' wide)
- 2. Put a fibre cloth in the bottom to prevent vegetation from growing through the GreenPad.
- Start filling the frame with about 14 cm (5.5") of packed gravel to begin with (the MultiGolfPark Cup installation depth is 36 cm or 14.2"). This way the cup will be slightly below ground level at the

end. Use either machinery or body weight for packing.

- Place the MultiGolfPark Cup in the middle of the hole so that its top will be at ground level. Make sure it's level. The DiscGolfPark Target base should be attached before filing the hole with the rest of the gravel.
- 5. Fill the hole with gravel around the MultiGolfPark Cup and pack tightly making sure the GreenPad surface will be level.
- Place the two turf mats on top of the 4 x 4 meter area. (Imperial units: 13' x 13' wide area)
- 7. Cut an opening for the MultiGolfPark Cup.
- 8. If you have ordered the optional MultiGolfPark Cup Frame, put it on top of the MultiGolfPark Cup and attach with screws.

