



Target Installation - Parts and Tools Needed


- Target parts (4): chain rack, basket, pole, MGP cup with target base and a 2-part GreenPad (included in regular delivery)
- Bolts and nuts for attaching target parts (included in regular delivery)
- 8 mm hex key (included in regular delivery)
- Digging equipment
- Gravel or crushed stone (Ø 4-8 mm) for the GreenPad around the target. Amount: 8 m³.
- Fill sand for the GreenPad around the target. Amount: 15-20 kg per square meter - roughly 225-300 kg per GreenPad.
- Fibre cloth (4m x 4m)
- Box cutter or similar for cutting turf

Accessories

- flag



 Detailed installation instructions on the back side.

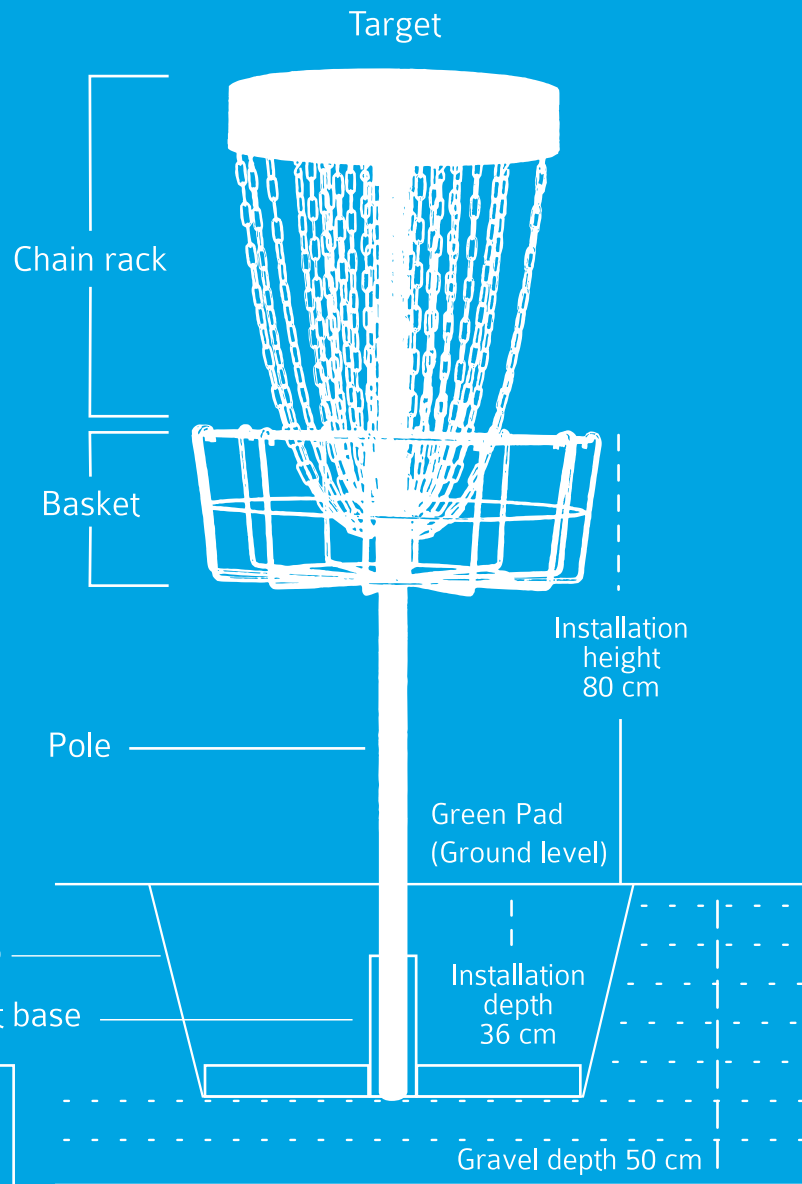



Installation Phases

1. Dig a hole that is 50 cm deep and 4 by 4 meters wide.
2. Put a fibre cloth in the bottom to prevent vegetation from growing through the GreenPad.
3. Start filling the frame with about 14 cm of packed gravel to begin with (the MultiGolfPark Cup installation depth is 36 cm). This way the cup will be slightly below ground level at the end. Use either machinery or body weight for packing.
4. Place the MultiGolfPark Cup in the middle of the hole so that its top will be at ground level. Make sure it's level. The DiscGolfPark Target base should be attached before filling the hole with the rest of the gravel.
5. Fill the hole with gravel around the MultiGolfPark Cup and pack tightly making sure the GreenPad surface will be level.
6. Place the two turf mats on top of the 4 x 4 meter area.
7. Cut an opening for the MultiGolfPark Cup.
8. If you have ordered the optional MultiGolfPark Cup Frame, put it on top of the MultiGolfPark Cup and attach with screws.

